

2.6.1 Special vehicles

Important: *Protect the environment: stop engines when vehicles are not in use.*

- Drivers of special vehicles, such as extra wide or high vehicles, must only drive onto the site with prior agreement with the supervisor/site manager who will advise as to the preferred route and possible site risks.
- The supervisor/site manager will also arrange for auxiliary vehicles, if necessary.

2.7 In Case of Runaway Operation

A runaway operation is almost impossible, as it would require several circumstances to happen at the same time.

- If a runaway operation should occur, the plant must be evacuated immediately by running upwind, and access to the surrounding area in a radius of at least 500 metres must be restricted.

1642.42 Feet

2.8 Rules for Two Person Teams

Normally, tasks are assigned to teams with a minimum of two persons. Lone working is permitted only in special circumstances. Lone working tasks must be planned to prevent or minimise team member isolation, for example out of sight or hearing range. If team members must be isolated from one another, however briefly it may be, they must maintain communication to ensure one another's safety for example by using two-way radio or mobile phone.

- If two persons are so far from each other that they are out of hearing range, two-way radio or mobile phones must be used. Always bring a fully charged spare battery for the communication device.
- If one of the team members needs a break, the work must be interrupted.
- One member of the team must under no circumstances stop the work or leave the area without informing the other person.

2.9 Lone Working

In special cases not involving electrical work, service personnel might be permitted to work independently.

- Only competent and educated personnel are allowed to carry out lone working.
- Communication between the lone worker and a contact/base person must be established.
- An emergency plan must be agreed between the lone worker and the contact/base person

2.9.1 Emergency plan for lone working

- The lone worker must contact a base person with agreed intervals. It is recommended that intervals between calls are 15 minutes. Intervals between calls might be different considering the risk connected to a specific task.
- If the lone worker is not in contact with the base person the base person must:
 - Contact the lone worker.
 - If impossible to make contact to the lone worker, "The Emergency Procedure for Working Injury" must be carried out.